
		`												
	Sub:	Wireless and Cellular Communication										Sub Code: 18EC81		
	Date:	14/0	5/202	22.	Dur	ation:	90	Mini	ites	М	ax M	arks:	50	Sem / Sec:

USN

- Explain the free space propagation model for path loss along with equations.
 - Path loss is defined as the difference (in dB) between the effective transmitted power and the received power
 - Free-space path loss is defined as the path loss of the free-space model PL(dB)=10 log(Pt/Pr)=-10 $log(GtGr\lambda 2)/(4\pi)$ 2d2
 - The gain of an antenna G is related to its affective aperture Ae by $G=4\pi Ae / \lambda 2$ where Ae is related to the physical size of the antenna, λ is related to the carrier frequency ($\lambda=c/f=2\pi c/\omega c$) where f is carrier frequency in Hertz, c is speed of light in meters/sec o ωc is carrier frequency in radians per second
 - Friis free space model is only valid to predict "Pr" for the values of "d" which are in far-field from transmitting antenna
 - The far-field or Fraunhofer region of a transmitting antenna is defined as the region beyond the far-field distance df given by: $df = 2D2/\lambda$, D is the largest physical dimension of the antenna o Additionally df >> D
- 2 Explain the two-ray model of ground reflection with proper diagrams and equations.
 - 1. Free space propagation model is in accurate when used alone
 - 2. This model is found reasonably accurate when compared with the FSPL Model
 - 3. 2 ray model assumes both LOS and Reflected Signal for modelling the path loss

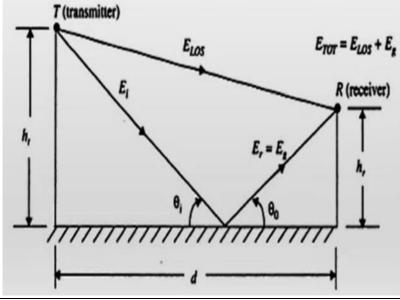

Assumptions:

- Height of the antenna are larger than the wavelength of propagating wave. i.e., h_t . h_r >> λ
- Height of the antenna are lesser than the T-R Separation.
 i.e., h, h, c<< d
- Reflected waves are considered as gracing incidence waves
- 4. Lack of curvature of earth

Legend:

- h_t Height of Tx.Antenna
- 2. hr Height of Rx.Antenna
- 3. ELOS E Field of LOS Signal
- E_g E Field of Ref. Signal
- 5. d (T R) Separation

Parameters to be Estimated:


- E Field of Both Rays E_{los} & E_g
- Path Difference (Δ)
- 3. Phase Difference (θ_{Λ})
- 4. Time delay (τ_d)

General Equation for Plane wave in free space is given by:

$$E(Z,t) = E_o \cdot e^{-\alpha Z} \cdot Cos(\omega t - \beta Z) \cdot \widehat{ax}$$

Let us rewrite the above equation with our own variables:

$$E(d,t) = \frac{E_o d_o}{d} \cdot Cos \left(\omega_c (t - \frac{d}{c}) \right)$$

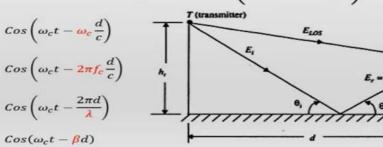

Calculating E Field (Etot):

Let us define the E field eqn. for LOS Signal and Reflected Signal:

$$E_{los}(d',t) = \frac{E_o d_o}{d'} \cdot Cos\left(\omega_c(t - \frac{d'}{c})\right) \qquad (1)$$

$$E_g(d'',t) = \Gamma \frac{E_o d_o}{d''} \cdot Cos\left(\omega_c(t - \frac{d''}{c})\right) \qquad (1)$$

An Ideal receiver just adds up all the received signal so the total E Field Eqn. is Given by:

$$|E_{tot}| = |E_{los}| + |E_g|$$

$$|E_{tot}| = \frac{E_o d_o}{d'} \cdot Cos\left(\omega_c(t - \frac{d'}{c})\right) + \Gamma \frac{E_o d_o}{d''} \cdot Cos\left(\omega_c(t - \frac{d''}{c})\right) - \left(111\right)$$


We know that from the laws of reflection in dielectrics, the reflection coefficient is (-1)

$$|E_{tot}| = \frac{E_o d_o}{d'} \cdot Cos\left(\omega_c(t - \frac{d'}{c})\right) + (-1)\frac{E_o d_o}{d''} \cdot Cos\left(\omega_c(t - \frac{d''}{c})\right) \qquad - \left(|V|\right)$$

Using the method of images, Δ , between the line-of-sight and the ground reflected paths can be expressed as

$$\Delta = d'' - d'' = \sqrt{(h_t + h_r)^2 + d^2} - \sqrt{(h_t - h_r)^2 + d^2}$$

$$\Delta = d'' - d' \approx \frac{2h_t h_r}{d}$$

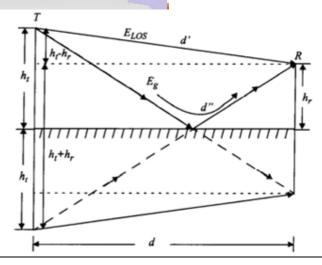

 $= E_{LOS} + E_{I}$

Coefficient

The combined E-field becomes

$$E_{\mathrm{TOT}}(d,t) = E_{\mathrm{LOS}}(d',t) + E_{\mathrm{g}}(d'',t) = \frac{E_{\mathrm{0}}d_{\mathrm{0}}}{d'} \exp\!\left(j\omega_{c}\!\left(t - \frac{d'}{c}\right)\right) - \frac{E_{\mathrm{0}}d_{\mathrm{0}}}{d''} \exp\!\left(j\omega_{c}\!\left(t - \frac{d''}{c}\right)\right) + \frac{E_{\mathrm{0}}d_{\mathrm{0}}}$$

At some time, say at $t=d^{\prime\prime\prime}/c^{\prime\prime}$

$$E_{\text{TOT}}(\overline{d, t = \frac{d''}{c}}) = \frac{E_0 d_0}{d'} \exp\left(j \frac{\omega_c \Delta}{c}\right) - \frac{E_0 d_0}{d''} \qquad - \qquad \left\{ \bigvee \right\}$$

Also note that, when $d >> h_t + h_r$,

$$\left| \frac{E_0 d_0}{d'} \right| \approx \left| \frac{E_0 d_0}{d''} \right| \approx \left| \frac{E_0 d_0}{d} \right|$$

3 A mobile is located 5 km away from the base station and uses a vertical $\lambda/4$ monopole antenna with a gain of 2.55 dB, to receive cellular signal. The E field at 1 km away from the transmitter is measured to be 10-3 v/m, the carrier frequency is 900 MHz A] Find the length and the effective aperture of the receiving antenna. B] Find the received power at the mobile using 2 ray ground reflection model assuming height of 50 m and receiving antenna is 1.5m above the ground.

Given:

T-R separation distance = 5 km

E-field at a distance of $1 \text{ km} = 10^{-3} \text{ V/m}$

Frequency of operation, f = 900 MHz

$$\lambda = \frac{c}{f} = \frac{3 \times 10^8}{900 \times 10^6} = 0.333 \,\mathrm{m}.$$

Length of the antenna, $L = \lambda/4 = 0.333/4 = 0.0833 \text{ m} = 8.33 \text{ cm}$.

Gain of antenna =1.8 = 2.55 dB.

(b) Since $d \gg \sqrt{h_t h_r}$, the electric field is given by

$$E_R(d) \approx \frac{2E_0 d_0}{d} \frac{2\pi h_t h_r}{\lambda d} \approx \frac{k}{d^2} \text{ V/m}$$

$$= \frac{2 \times 10^{-3} \times 1 \times 10^3}{5 \times 10^3} \left[\frac{2\pi (50) (1.5)}{0.333 (5 \times 10^3)} \right]$$

$$= 113.1 \times 10^{-6} \text{ V/m}.$$

The received power at a distance d can be obtained using equation (3.15)

$$P_r(d) = \frac{\left(113.1 \times 10^{-6}\right)^2}{377} \left[\frac{1.8(0.333)^2}{4\pi}\right]$$

 $P_r(d = 5 \text{ km}) = 5.4 \times 10^{-13} \text{ W} = -122.68 \text{ dBW or } -92.68 \text{ dBm}.$

Explain (a) Delay Spread and Coherence Bandwidth (b) Doppler spread and Coherence Time (c)Angular 4 spread and Coherence Distance

- a) Delay Spread
- The delay spread is the amount of time that elapses between the echo (typically the first line-of-sight component and the last arriving) path.
- It is also referred to as the Multipath Intensity Profile, or power delay profile as it measures the multipath richness of channel.
- It specifies the duration of the channel impulse response $h(\tau, t)$. **Delay spread** can be quantified through different metrics, although the most common one is the root mean square, the mean delay of the channel is:

$$\mu_{\tau} = \frac{\int_{0}^{\infty} \Delta \tau A_{\tau}(\Delta \tau) d(\Delta \tau)}{\int_{0}^{\infty} A_{\tau}(\Delta \tau) d(\Delta \tau)}$$

And the rms delay spread is given by :

$$\tau_{\rm rms} \; = \; \sqrt{\frac{\int_0^\infty (\Delta \tau - \mu_\tau)^2 A_\tau(\Delta \tau) d(\Delta \tau)}{\int_0^\infty A_\tau(\Delta \tau) d(\Delta \tau)}}$$

The delay spread can be found by channel autocorrelation function A ($\Delta \tau$, 0) by setting $\Delta t = 0$.

- b) Coherence bandwidth B c -
 - Bandwidth over which the channel transfer function remains virtually constant.
 - Channel is considered relatively constant over the transmit bandwidth happens if the transmission BW < 'coherence' BW (i.e. Bc of the channel).
 - A signal sees a narrowband channel if the bit duration >> inter-arrival time of reflected waves ISI is small.

c) Doppler Spread

- In channels where transmitter and receiver move relative to each other the signal frequency is shifted depending on the velocity and as a result the spectrum of the narrowband signal transmitted widens.
- This so-called Doppler effect can be observed on passing cars, moving stars and wireless communications.
- d) Coherence Time
- It gives the time period over which the channel is significantly correlated i.e. the time duration over which two received signals have a strong potential for amplitude correlation.
- Coherence time is actually a statistical measure of the time duration over which the channel impulse response is essentially invariant.

Mathematically

$$|t_1 - t_2| \le T_c \Rightarrow \mathbf{h}(t_1) \approx \mathbf{h}(t_2)$$

 $|t_1 - t_2| > t_c \Rightarrow \mathbf{h}(t_1)$ and $\mathbf{h}(t_2)$ are uncorrelated

Coherence time and doppler spread inversely related

$$T_c \approx \frac{1}{f_D}$$

- e) Angular spread
- It refers to the statistical distribution of the angle of the arriving energy.
- A large θ rms implies that channel energy is coming in from many directions, whereas a small θ rms implies that the received channel energy is more focused.

- A large angular spread generally occurs when there is a lot of local scattering, and this results in more statistical diversity in the channel
- f) Coherence Distance
- The coherence distance is the spatial distance over which the channel does not change appreciably.
- The dual of angular spread is coherence distance.
- As the angular spread increases, the coherence distance decreases, and vice versa.
- Mathematically: For Rayleigh fading which has a uniform angular spread

$$D_c \approx \frac{.2\lambda}{\theta_{\rm rms}}$$

if a total of 33MHz of bandwidth is allocated to a particular FDD cellular telephone system which uses two 25kHz simplex channels to provide full duplex voice and control channels, compute the number of channels available per cell if a system uses (a) 4-cell reuse (b) 7-cell reuse (c) 12-cell reuse. If 1 MHz of the allocated spectrum is dedicated to control channels, determine an equitable distribution of control channels and voice channels in each cell for each of the three systems.

Total bandwidth = 33 MHz

Channel bandwidth = 25 kHz × 2 simplex channels = 50 kHz/duplex channel

Total available channels = 33,000/50 = 660 channels

(a) For N = 4,

total number of channels available per cell = 660/4 = 165 channels.

(b) For N = 7,

total number of channels available per cell = $660/7 = 94.29 \approx 95$ channels.

(c) For N = 12,

total number of channels available per cell = 660/12 = 55 channels.

A 1 MHz spectrum for control channels implies that there are

Control channels = 1 MHz / 50 KHz

= 1000/50

= 20 control channels out of the 660 channels available

Voice channels = Total channels - Control channels

= 660 - 20

= 640

```
(a) For N = 4,

Control channels per cell = 20/4 = 5 Channels

Voice Channels per cell = 640/4 = 160 Channels

(b) For N = 7,

Control channels per cell = 20/7 = 2.85 = 3 Channels (4 cells)

Voice Channels per cell = 640/7 = 91.43 = 92 Channels (4 cells)

2 cells with 3 control channels and 90 voice channels

1 cell with 2 control channel and 92 voice channels


(c) For N = 12,

Control channels per cell = 20/12 = 1.67 = 2 Channels (8 cells)

Voice Channels per cell = 640/12 = 53.33 = 53 Channels (8 cells)


4 cells with 1 control channels and 54 voice channels
```

- Explain the following capacity expansion techniques in cellular communications (a) Cell splitting (b) Cell sectoring
 - (a) Cell splitting

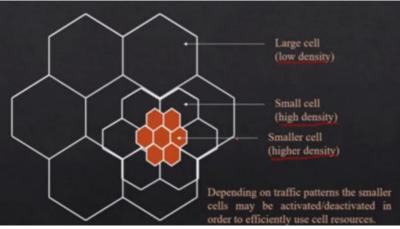

- It is the process of subdividing a congested cell <u>into smaller cells</u>. (each with <u>its own base station</u> and a corresponding reduction in antenna height and transmitter power).
- The increased no. of cells would <u>increase the no. of clusters</u> which in turn would <u>increase the no. of channels reused</u> and capacity.
- Each cell is divided into <u>six new smaller cells</u> with approximately <u>one-quarter the area</u> of the larger cells and use the same channel as shown in figure 3.4.
- To preserve the overall system frequency reuse plan, the <u>transmit power of these cells must be reduced by a factor of approximately 16 or 12dB.</u>
- (b) Cell sectoring

Cell Sectoring - Uses directional antennas to effectively split a cell into 3 or sometimes 6 new cells.

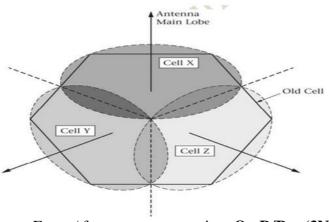

- Reuse Factor/ frequency reuse ratio : $Q = D/R = (3N)^{1/2}$
- 3 directional antennas with 120° beamwidth to illuminate the entire area previously services by omnidirectional antenna
- Cell Sectoring provides co-channel interference reduction, hence S/I ratio increases.
- It does not require new cell sites and additional antennas and triangular mounting only.